

# KODAK CHERISH C225

## SMART BABY MONITOR

### Quick Start Guide

For full explanation of all features and instructions, please refer to the Setup & Installation Guide.



### (I) Setup in App

1. Download the **KODAK Smart Home** app from the APP STORE (iOS) or GOOGLE PLAY Store(Android).
2. Create or login to your account.
3. Add the **KODAK CHERISH C225** Baby Monitor to your **KODAK Smart Home** app.
4. Follow the instructions to set up your Baby Monitor.
5. Pairing in progress. Wait until you hear the message "Setup Completed."
6. Once paired, test your Baby Monitor. Move your router if necessary.

### (II) Pairing between the Baby Unit and the Parent Unit

The Baby Unit comes pre-registered to the Parent Unit. Simply connect the power supply for both the Baby Unit and the Parent Unit to start using.

1. Connect the small end of the power adapter to the Baby Unit and the other end to the electrical outlet. Only use the adapter supplied (5V DC/1500mA). Ensure the ON/OFF switch is in the "ON" position.
2. Connect the small end of the power adapter to the Parent Unit and the other end to the electrical outlet. Only use the adapter supplied (5V DC/1500mA).



#### **WARNING:**

**STRANGULATION HAZARD**-Children have STRANGLED in cords. Keep this cord out of the reach of children (more than 3ft (1m) away) from the crib. Do not use with an extension cord. Only use the AC Adapters provided.

### (III) Basic Operations

#### Baby Unit

Slide to the **ON** or **OFF** position to switch ON or OFF the unit.

#### Parent Unit



##### **Menu Key**

Press to enter/exit the menu mode



##### **Return Key**

Press to return to the previous page



##### **Video Key**

Press to turn on/off the LCD display



##### **Up Key**

Press to scroll /pan up



##### **Down Key**

Press to scroll /pan down



##### **OK Key**



Press to confirm

##### **Power Key**



Press to turn on/off the device

##### **Talk Key**



Press and hold to speak to your baby

##### **Left Key**



Press to scroll/pan left

##### **Right Key**



Press to scroll/pan right

### KODAK Smart Home App Icons



##### **Menu**

Press to show/hide the mini menu



##### **Mute/Unmute**

Press to toggle between mute/unmute



##### **Talk**

Press this to talk to your baby




##### **Screenshot**

Press this to take a snapshot of the screen



##### **Record a Video**

Press this to record video

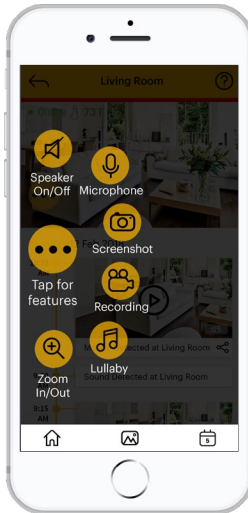

##### **Melody**



Press to play music for your baby

##### **Zoom in/out**



Press to zoom in/out the screen

##### **Dashboard**



Tap here to view all your connected devices

##### **Video Gallery**



Tap here to view your recorded footages

##### **Timeline**



Press here check the history of your devices

### (IV) General Information

#### **If your product is not working properly...**

1. Read this Quick Start Guide or the User's Guide at:

<https://kodaksmarthome.com/support/userguides>

2. Contact customer service at: [support@kodaksmarthome.com](mailto:support@kodaksmarthome.com)



The Kodak trademark, logo and trade dress are used under license from Kodak.